

Link to the product: <https://sforne.com/je-joue-nuo-v2-vibrating-anal-plug-p-8706.html>

JE JOUE - NUO V.2 VIBRATING ANAL PLUG



Price	161.60 £
Number	70141631
Producer code	FETISHID-216304
EAN	5060170971956

Product description

Discover multi-sensual pleasure with the world's first dualmotor butt plug.

With remote control options (via the Je Joue app) Nuo enhances seduction and intensifies pleasure for him and her. Nuo's motor is designed to a low frequency to give our signature Je Joue oh-so-low rumbling vibrations. With 5 speeds and 7 patterns, Nuo offers a wide range of vibrations - from a gentle purr to a deep rumble.

Partner play becomes more of a tease with our easy-to-use app. Nuo is a uniquely different anal toy, shaped with a gentle curve and bulbous 'body'. The slender base follows the body's natural lines and allows the toy to nestle between the buttocks and stay in place with ease. Nuo features two independent motors to allow you to choose from a simultaneous or separate stimulation of the prostate and the perineum, an incredibly sensitive yet often overlooked, erogenous zone.

- Prostate play Rotate Nuo with the curve facing upward (towards the direction of the belly button) to better access the prostate (aka P-spot), one of the most sensitive erogenous zones in the male body. Tilt and rock Nuo to explore depths and intensify the experience to your satisfaction.

- Posterior preparation Nuo boasts a unique width at its stem that makes it an ideal toy to use in preparation for anal sex. Our discreet app is beautiful and easy to use, it allows you to create a playlist to send to your partner for staying connected wherever you are. Nuo gives you the option to save your sessions. You can then select from the saved sessions and use your toy hands free.

To start, download the free Je Joue app.

- Turn your devices Bluetooth on and open the Je Joue app (if this is your first time using it, a tutorial will appear automatically and walk you through the app)
- Turn on your toy by holding the "+" button for 2 seconds.
- If you want to start a new session, press "Play now" - your toy will sync with your device, which is shown by the light on the toy turning from red to blue. At this point your toy will stop vibrating.
- Start by selecting any one of the patterns on the screen - your toy will begin to vibrate.
- To change the vibration speed, select the numbers on the right hand side of the screen (1-5) or gently swipe the screen up and down.
- To change the vibrating pattern, swipe the screen left or right.
- If you want to stop the session, press the pause button in the bottom left of the screen.
- The "Close to stop session" option will bring you back to the patterns screen so you can re-start your session.
- The pause button will give you the option of stopping your session completely, or resuming your session.
- When you stop your session, you have the ability to save your session and re-load it to your toy at a later date.

Specifications:

- Height 97.54 mm
- Width 83.95 mm

-
- Depth 35.67 mm
 - Total Weight 87 g
 - 5 speeds
 - 7 patterns
 - Quiet
 - BODysafe
 - Waterproof
 - Rechargeable

Care Guide

Black Toy Guide

Clean after each use - white stains visible on black. Use toy cleaner or soap and water.

Store separately from other colors (dye transfer possible).