

Link to the product: <https://sforne.com/lelo-clitoris-stimulator-sona-cruise-fuchsia-p-15671.html>



LELO - CLITORIS STIMULATOR SONA CRUISE FUCHSIA

Price	124.01 £
Number	86304048
Producer code	FETISHID-213744
EAN	7350075026041

Product description

For most women, sexual pleasure is as much about the journey as the destination. The SONA™ Cruise sonic massager stimulates the entire clitoris, its external and internal part, with waves of consistent buzzing sounds, to reach a type of orgasm with the pleasant massage of the internal tissue, through massage with sonic waves.

An extended climax after a sensual progressive arousal, an orgasm that comes from somewhere inside you. And, thanks to the Cruise Control speed regulator, you can keep the pleasure exactly how you want it.

What is Cruise Control?

For the first time in history, the technology that has been used for years in racing cars reaches sex toys.

Developed by LELO exclusively for SONA Cruise, the Cruise Control speed regulator maintains all the intensity of the toy when you press it on your body. In this way, you will live a perfectly consistent sensual experience. And best of all, it is an automatic function that erases the most common complaint about pleasure products in one fell swoop.

Characteristics

- Completely submersible.
- Easy to clean
- The soft, submersible material makes it incredibly easy to clean.
- USB rechargeable. With its included USB charging cable, you can take your SONA Cruise wherever you go.
- 8 modes for pleasure. A selection of stimulation modes designed so that you can find the sensation that you most want.

How to use:

- To unlock it, press the +/- buttons for 3 seconds, until the light turns on.
- Press the + button to turn it on and to increase the intensity of the vibrations. Press the () button to try its 8 stimulation modes.
- Press the - button to reduce the intensity of the vibrations, and press it to turn it off.

Technical specifications:

- Material: ABS and silicone
- Finish: matte and glossy
- Size: 99 x 88 x 56mm
- Weight: 116g
- Battery: Li-Ion 530mA 3.7V
- Charging time: 2 ore at 5.0 V 100 mA
- Duration: 1h

-
- Stimulation modes: 8
 - Frequency: 120Hz
 - Max. noise level: <50dB
 - Interface: 3 buttons
 - Cherry color

Beginner Guide

EPIC Guide

Great first toy - low investment, low risk. Try different styles to learn preferences.

Upgrade to premium brands when you know what you like.