

Link to the product: <https://sforne.com/lelo-dot-cruise-clitoris-stimulator-ocher-orange-p-5559.html>



## LELO - DOT CRUISE CLITORIS STIMULATOR OCHER ORANGE

Price	<b>249.29 £</b>
Number	<b>70138401</b>
Producer code	<b>FETISHID-235765</b>
EAN	<b>7350075029035</b>

### Product description

LELO DOT Cruise is the improved version of our revolutionary precise clitoral stimulator. Uses Infinite Loop technology, which combines a unique elliptical movement with a soft, flexible tip of the toy to offer unparalleled stimulation and with absolute precision on the clitoris and any external erogenous zone. But what sets LELO DOT Cruise apart from the previous generation is the introduction of patented Cruise Control technology. Thanks to it, all those people who want to experience multiple sensations can seek them using the different pleasure modes and their constant intensity.

#### What is Cruise Control technology?

Cruise Control technology, specially developed by LELO, means that when you press the LELO DOT Cruise hard on your body, the power does not decrease. This allows you to enjoy a completely consistent and hassle-free experience. It's not just another setup, it's fully automatic and puts an end to the most common complaints about pleasure products.

#### 8 POWERFUL MODES OF PLEASURE

LELO DOT Cruise offers eight vibration modes with different intensities ranging from gentle touches to very exciting pulses.

#### ULTRA-SOFT SILICONE

High-quality, ultra-soft silicone that is warm to the touch for deeply satisfying and hygienic pleasure.

#### USB RECHARGEABLE AND COMPLETELY SUBMERSIBLE ACCORDING TO IPX7 STANDARD

Enjoy unlimited climaxes anytime, anywhere, including the bath or shower.

#### CHARACTERISTICS:

- Materials: biocompatible silicone and ABS plastic
- Finish: smooth
- Size: 60 x 46 x 165mm
- Weight: 98g
- Battery: 520mAh 3.7V lithium ion battery
- Charging: up to 2 h at 5.0 V 500 mA
- Rated power:
- Input: 5V 2.5W
- Output: 3.7V 1W
- Use time: up to 2 hours
- Standby: up to 90 days
- Frequency: 133Hz
- Max level noise: 60 dB
- Interface: 3 buttons

#### INSTRUCTIONS FOR USE:

- 
- Before first use, charge your LELO DOT Cruise for 2 hours.
  - The interface of your LELO DOT Cruise may be blocked. Hold + and - for 3 seconds.
  - Press and hold the (( )) button to turn it on.
  - Press the (( )) button to switch between the 8 modes.
  - Use the + or - button to increase or decrease the intensity.
  - Press and hold the (( )) button to turn it off

## Toy Guide

### **Adult Toy Guide**

Start with a small vibrator or bullet. Add lubricant. Clean after each use.

Explore categories to find what excites you.