$Link\ to\ the\ product:\ https://sforne.com/lelo-dot-cruise-clitoris-stimulator-pistachio-green-p-5548.html$ 



# LELO - DOT CRUISE CLITORIS STIMULATOR PISTACHIO GREEN

Price	205.58 €
Number	70138400
Producer code	FETISHID-235764
EAN	7350075029028

## **Product description**

LELO DOT Cruise is the improved version of our revolutionary precise clitoral stimulator. Uses Infinite Loop technology, which combines a unique elliptical movement with a soft, flexible tip

of the toy to offer unparalleled stimulation and with absolute precision on the clitoris and any external erogenous zone. But what sets LELO DOT Cruise apart from the previous generation is the introduction of patented Cruise Control technology. Thanks to it, all those people who want to experience multiple sensations can seek them using the different pleasure modes and their constant intensity.

## What is Cruise Control technology?

Cruise Control technology, specially developed by LELO, means that when you press the LELO DOT Cruise hard on your body, the power does not decline. This allows you to enjoy a completely consistent and hassle-free experience. It's not just another setup, it's fully automatic and puts an end to the most common complaints about pleasure products.

### **8 POWERFUL MODES OF PLEASURE**

LELO DOT Cruise offers eight vibration modes with different intensities ranging from gentle touches to very exciting pulses.

#### **ULTRA-SOFT SILICONE**

High-quality, ultra-soft silicone that is warm to the touch for deeply satisfying and hygienic pleasure.

#### USB RECHARGEABLE AND COMPLETELY SUBMERSIBLE ACCORDING TO IPX7 STANDARD

Enjoy unlimited climaxes anytime, anywhere, including the bath or shower.

#### **CHARACTERISTICS:**

- Materials: biocompatible silicone and ABS plastic
- Finish: smooth
- Size: 60 x 46 x 165mm
- Weight: 98g
- Battery: 520mAh 3.7V lithium ion battery
- Charging: up to 2 h at 5.0 V 500 mA
- Rated power:
  Input: 5V 2.5W
  Output: 3.7V 1W
  Use time: up to 2 hours
  Standby: up to 90 days
- Frequency: 133Hz
  Max level noise: 60 dB
  Interface: 3 buttons

#### **INSTRUCTIONS FOR USE:**

- Before first use, charge your LELO DOT Cruise for 2 hours.
  The interface of your LELO DOT Cruise may be blocked. Hold + and for 3 seconds.
- Press and hold the (()) button to turn it on.
  Press the (()) button to switch between the 8 modes.
- Use the + or button to increase or decrease the intensity.
  Press and hold the (()) button to turn it off