

Link to the product: <https://sforne.com/lelo-sila-aqua-green-clitoris-wave-stimulator-p-15684.html>



LELO - SILA AQUA GREEN CLITORIS WAVE STIMULATOR

Price	211.70 £
Number	86304061
Producer code	FETISHID-225672
EAN	7350075028236

Product description

Discover new ways to reach climax with SILA™ and experience the wonders of clitoral stimulation through its delicate sonic waves.

Immerse yourself in a spiral of eternal orgasms with this beautiful massager, whose mouth orbits around your pleasure point and turns a sensual experience into a comfortable series of infinite orgasms

CHARACTERISTICS

VERY DELICATE SONIC WAVES

- The SILA's sonic waves gently stimulate your clitoris so that you can enjoy a highly intense climax and immerse yourself in a spiral of orgasms.

WIDER MOUTH

- Without coming into direct contact with your body, the wide mouth of your SILA orbits around the center of your pleasure point, in a comfortable and satisfying way.

EXTRA SOFT SILICONE

- It is made of ultra-soft, body-safe silicone so you have a unique sensual experience and total peace of mind. 100%

SUBMERSIBLE AND USB RECHARGEABLE

- With the included USB charger, you can take your SILA™ wherever you want since in addition to being soft and submersible, it is very easy to clean.

TECHNICAL SPECIFICATIONS

- Use time: Up to 2 hours
- Standby: 90 days
- Frequency: 60Hz
- Interface: 3 buttons
- Material: body safe silicone, ABS
- Size: 80 x 75 x 35mm
- Weight: 105g
- Battery: Li-Ion 520 mA 3.7 V
- Load: 2 h at 5.0V 500 mA

HOW TO USE IT:

-
- Make sure SILA™ is unlocked by pressing and holding the + and - buttons for 3 seconds until the light turns on.
 - Press the + button to turn it on and press it again to increase the vibration intensity.
 - Press the () button to switch to any of the 8 vibration patterns.
 - Press the - button to reduce the vibration power.
 - Press the button () to turn it off.

Clit Guide

Clitoral Toy Guide

Start with lower speeds, increase gradually. Use lubricant for comfort. Many women prefer clitoral toys over internal stimulation.

Clean after each use with soap and water or toy cleaner.