

Link to the product: <https://sforne.com/lelo-sona-2-travel-purple-sonic-clitoris-massager-p-15692.html>



## LELO - SONA 2 TRAVEL PURPLE SONIC CLITORIS MASSAGER

Price	<b>124.01 £</b>
Number	<b>86304069</b>
Producer code	<b>FETISHID-235972</b>
EAN	<b>7350075029240</b>

### Product description

**SONA™ 2 Travel** is the compact version of our best-selling SONA™ 2. It has been developed to enhance the intimate user experience with its elegant, discreet and compact design. It uses LELO's exclusive SenSonic™ technology, which offers the clitoris powerful sonic wave stimulation so that you end up incredibly satisfied. **SONA™ 2 Travel** is the perfect companion for those who seek pleasure on their multiple trips, as it allows you to easily access orgasm at all times.

Instead of conventional vibrations, SenSonic™ technology uses sonic pulses that resonate deep within the internal structure of the clitoris for a completely new sensation. These sonic waves offer you gentle stimulation with different intensities without making direct contact.

**SONA™ 2 Travel** offers you:

- 12 different modes for you to experiment and explore.
- Thanks to its compact size and the fact that it can be locked for transport, it is the perfect travel companion.
- LELO's classic design with biocompatible silicone offers you highly rewarding and hygienic pleasure.

### CHARACTERISTICS :

- **Materials** : biocompatible silicone and ABS plastic
- **Finish** : smooth
- **Size** : 87 x 54 x 46mm
- **Weight** : 67g
- **Battery** : 300mAh 3.7V lithium ion battery
- **Charge** : up to 2 hours at 5.0 V 500 mA
- **Rated power** : - Input: 5 V 1.5 W - Output: 3.7 V 0.75 W
- **Use time** : up to 2 hours
- **Max level noise** : < 70 dB
- **Interface** : 3 buttons

### INSTRUCTIONS FOR USE :

- Before first use, charge your **SONA™ 2 Travel** for 2 hours.
- Your **SONA™ 2 Travel** interface may be locked. Hold + and - for 3 seconds.
- Press and hold the **(|)** button to turn it on.
- Press the **(|)** button to switch between the 12 modes.
- Use the + or - button to increase or decrease the intensity.
- Press and hold the **(|)** button to turn it off.

### Toy Guide

---

## **Adult Toy Guide**

Start with a small vibrator or bullet. Add lubricant. Clean after each use.

Explore categories to find what excites you.