



NALONE - ELECTRO STIMULATOR

Price	193.80 Euro
Number	70146266
Producer code	FETISHID-207047
EAN	700461030652

Product description

Discover a new concept, did you think you had seen it all? Nalone hides more than what you see, at first glance a normal vibrator, inside cutting-edge technology at the service of pleasure.

Designed to massage the entire body, this elegant vibrator has a powerful motor and a hidden secret. Nalone has introduced Electro Magnetic Pulse technology in the head. In this way, it produces intense micro-currents that stimulate your most sensitive nerve endings to increase sensation levels.

Specifications;

- Material: Silicone and ABS
- Vibration modes: 5 electromagnetic vibration modes (4 intensity) + 7 vibration frequencies
- Maximum noise level: less than 30 dB
- Dimensions: 213mm(L) x 40mm(A) Charge: Rechargeable Lithium Polymer
- Average usage time on one charge: 2.5 hours
- 100% waterproof
- Average charging time: 3 hours

①Electromagnetic pulse driving circle②Upper motor③Electromagnetic pulse mode button④Electromagnetic pulse power switch⑤Upper motor and mode switch⑥Lower motor and mode switch⑦Lower motor ⑧Logo ⑨Charging port

Manual stimulation modes

- 1. Slow vibration
- 2. Medium vibration
- 3. Fast vibration
- 4. Gentle pulse vibration
- 5. Medium pulse vibration
- 6. Strong pulse vibration
- 7. Mixed vibration: short and long

How is it used?

- 1.To charge your vibrator, connect the charger's USB cable to a USB adapter. Connect the other part of the USB cable to the base of the vibrator (at the bottom of the vibrator). While charging, a blue light on the control panel will flash to indicate charging is taking place. Once charged, the light will stop flashing to indicate it is ready for use. Please note that the first time you use it, or if you haven't used it in a long time, the light may not turn on for a few minutes.
- 2.If you want to massage yourself internally, use a condom.

- 3. To start the upper motor, press and hold button for 2 seconds. Every time you press the button will change the vibration mode, going through the 7 available modes. To turn off the upper motor, press and hold the button for 2 seconds
- 4. To start the electromagnetic pulse, press and hold the button for 2 seconds. To disconnect the electromagnetic pulse, press and hold the button for 2 seconds.
- 5. When using electromagnetic mode, you can increase the intensity by pressing the button and selecting one of the 5 intensity levels.
- 6. To start the lower motor, press and hold the “ button for 2 seconds. Every time you press the button will change the vibration mode, going through the 7 available modes. To disconnect the lower motor, press and hold the button for 2 seconds.

Warning

- ♦ Make sure to charge the vibrator fully before use.
- ♦ Clean/disinfect your vibrator with warm water and antibacterial soap.
- ♦ Use only water-soluble lubricants. Never use massage oils, hand creams or other types of lubricant

Opening a box of NALONE products is a guarantee of quality. Each product is wrapped in an elegant and unique rigid white box, in which you will find inside

- Electro Vibrator
- USB Cable
- satin cover
- 1 year warranty
- User manual
- Instructions for use