

Link to the product: <https://sforne.com/nalone-fifi-clitoral-vibrator-p-4645.html>

## NALONE - FIFI CLITORIAL VIBRATOR



Price	<b>56.31 £</b>
Number	<b>70137487</b>
Producer code	<b>FETISHID-212339</b>
EAN	<b>700461169895</b>

### Product description

Discover a new concept, did you think you had seen it all? Nalone hides more than what you see, at first glance a normal vibrator, inside cutting-edge technology at the service of pleasure.

Meet Fifi, an external clitoral stimulator that will make this toy a perfect ally for your pleasure. It is ergonomically designed for maximum contact with the clitoris, it will transmit strong oscillating vibrations to your body.

The silicone with which it is made is safe and guarantees perfect stimulation.

Specifications;

- Material: Silicone and ABS
- Vibration modes: 7 sound vibration modes
- Maximum noise level: less than 50 dB
- Dimensions: 92mm(L)x51mm(D)
- Charging: lithium battery (USB charging cable included)
- 100% waterproof

① Vibrating tip② accessory connection cable③ Vibrating tip④ Vibrating tip⑤ Accessory On/Off/advance vibration mode ⑦ accessory connector⑥ Fi Fi On/Off/advance vibration mode⑧ Charging port

### Stimulation modes

- 1. Slow vibration
- 2. Medium vibration
- 3. Fast vibration
- 4. Medium pulse vibration
- 5. Rapid pulse vibration
- 6. 2 short vibrations and one long
- 7. Graduated pulse vibration

### How to use

1. To charge your vibrator, connect the charger's USB cable to a USB adapter (5V/1A adapter is recommended). Connect the other part of the USB cable to the base of the vibrator (at the bottom of the vibrator). While charging, a blue light on the control panel will flash to indicate charging is taking place. Once charged, the light will stop flashing to indicate it is ready for use. Please note that the first time you use it, or if you haven't used it in a long time, the light may not turn on for a few minutes.

- 
- 2. To turn on the vibrator, press and hold the button for 3 seconds.
  - 3. If you quickly press the button , the vibrator will go into manual mode. Every time you press the button It will change the vibration mode, going through all of them.
  - 4. To turn off the vibrator, press and hold the “ ” button for 3 seconds
  - 5. To use the FiFi 2 accessory, plug the accessory into the FIFI 2 base (Specification - Point 6. If you quickly press the “ ” button, the vibrator will go into manual mode. Each time you press the “ ” button it will change the vibration mode, going through all of them
  - 7. To turn off the vibrator, press and hold the button for 3 seconds

### **Warnings**

1. ♦ Make sure to charge the vibrator fully before use.
2. ♦ Clean/disinfect your vibrator with warm water and antibacterial soap.
3. ♦ Use only water-soluble lubricants. Never use massage oils, hand creams or other types of lubricant
4. ♦ After use, it is advisable to clean the vibrator to avoid bacterial growth.

## **Beginner Guide**

### **EPIC Guide**

Great first toy - low investment, low risk. Try different styles to learn preferences.

Upgrade to premium brands when you know what you like.