



## NALONE - ROCK PINK MASSAGER

|               |                        |
|---------------|------------------------|
| Price         | <b>50.41 €</b>         |
| Number        | <b>70146265</b>        |
| Producer code | <b>FETISHID-207039</b> |
| EAN           | <b>700861169860</b>    |

### Product description

Discover a new concept, did you think you had seen it all? Nalone hides more than what you see, at first glance a normal vibrator, inside cutting-edge technology at the service of pleasure.

Rock is perfectly designed for external and internal stimulation, a high-power, rechargeable vibrator with oscillating modes.

Its main characteristics are:

- Material: Hypoallergenic silicone (Abs in metal areas)
- Vibration modes: 7
- Maximum noise level: less than 50 dB
- Dimensions: 192mm(L) x 41mm(W)
- Charge: Rechargeable Lithium Polymer
- 100% waterproof

① Upper motor② Logo③ Mode button④ ON/OFF button⑤ Charging port

### Stimulation modes

1. Slow vibration
2. Medium vibration
3. Fast vibration
4. Gentle pulse vibration
5. Medium pulse vibration
6. Strong pulse vibration
7. Mixed vibration: short and long

### How to use?

1. To charge your vibrator, connect the charger's USB cable to a USB adapter. Connect the other part of the USB cable to the base of the vibrator (at the bottom of the vibrator). While charging, a blue light on the control panel will flash to indicate charging is taking place. Once charged, the light will stop flashing to indicate it is ready for use. Please note that the first time you use it, or if you haven't used it in a long time, the light may not turn on for a few minutes.
2. If you want to massage yourself internally, use a condom.
3. To turn on your vibrator, please press and hold the button for 3 seconds
4. If you quickly press the button, the vibrator will be put into manual mode and into the first vibration mode. Every time you press the button it will change the vibration mode, going through the 10 available modes.
5. To turn off the vibrator, hold the button pressed for three seconds

### Warnings

---

Make sure to charge the vibrator fully before use. \* Clean/disinfect your vibrator with warm water and antibacterial soap. \* Use only water-soluble lubricants. Never use massage oils, hand creams or other types of lubricant.

### **Cleaning and Care**

- After use, it is advisable to clean the vibrator to prevent bacterial growth.
- Warm water and antibacterial soap can be used to clean the vibrator.
- Dry the vibrator with a clean, soft towel and store it in the included bag. Do not expose your vibrator to direct sunlight.
- Store your vibrator in the included bag in a clean, dry place.

Opening a box of NALONE products is a guarantee of quality. Each product is wrapped in an elegant and unique rigid white box, in which you will find inside

- Wand Rock Massager Vibrator
- USB Cable
- satin cover
- 1 year warranty
- User manual
- Instructions for use