

NALONE - WAVE DUAL STIMULATOR VIBRATOR



Price	245.86 Euro
Number	70137434
Producer code	FETISHID-207046
EAN	700461030669

Product description

Discover a new concept, did you think you had seen it all? Nalone hides more than what you see, at first glance a normal vibrator, inside cutting-edge technology at the service of pleasure.

A sophisticated vibrator that, with its dual action motors, produces wave after wave of pleasure. The rotating cores and super soft silicone body combine to stimulate you as intensely as possible.

Specifications;

- Material: Silicone and ABS
- Vibration modes: 7 + 3 rotation speeds
- Maximum noise level: less than 60 dB
- Dimensions: 260[L]x37[W]mm
- Battery: Rechargeable Lithium Polymer
- Average usage time on a full charge: 2 hours
- 100% waterproof Average charging time: 3 hours

①Top motor②Pulses③Waves④Front motor⑤Logo⑥Front motor control⑦Top motor control⑧Wave control⑨ON/OFF button

Manual stimulation modes

- 1. Slow vibration
- 2. Medium vibration
- 3. Fast vibration
- 4. Slow vibration
- 5. Medium vibration
- 6. Fast vibration
- 7. 7 short vibrations and one long
- 8. 3 Rotation Speeds

How is it used

- 1.To put your vibrator on charge, connect the USB cable to a USB adapter. Connect the other end to the base of the vibrator (at the bottom back of the vibrator). While charging, the control panel will flash blue to indicate that it is charging. When charging is complete, the blue light will stop flashing and it will be ready for use. Please note that the first time you use it, or if you haven't used it in a while, it will take a few minutes for the control panel to turn on.
- 2.For internal use, you can use the vibrator with a condom.
- 3.To turn on your vibrator, hold the button pressed for 5 seconds.

- 4.Press the button to activate the upper motor. Every time you press the button , the vibrator will go through each of the different stimulation modes. If you hold down the button for 5 seconds, the top motor will turn off
- 5.Press the button to activate the front motor. Every time you press the button , the vibrator will go through each of the different stimulation modes. If you hold down the button for 5 seconds, the front motor will turn off.
- 6.Press to activate the Waves. Press and hold to deactivate Waves.
- 7.To turn off the vibrator, press for 5 seconds.
- 8.Please make sure to clean the vibrator with antibacterial soap in warm water. Dry the vibrator with a clean, soft towel and store it in the included bag in a clean, dry place.

Warnings

- Make sure to charge the vibrator fully before use.
- Clean/disinfect your vibrator with warm water and antibacterial soap.
- Use only water-soluble lubricants. Never use massage oils, hand creams or other types of lubricant

Cleaning and care

- ♦ After use, it is advisable to clean the vibrator to prevent bacterial growth.
- ♦ Warm water and antibacterial soap can be used to clean the vibrator.
- ♦ Dry the vibrator with a clean, soft towel and store it in the included bag. Do not expose your vibrator to direct sunlight.
- ♦ Store your vibrator in the included bag in a clean, dry place

Opening a box of NALONE products is a guarantee of quality. Each product is wrapped in an elegant and unique rigid white box, in which you will find inside

- Wave Vibrator
- USB Cable
- satin cover
- 1 year warranty
- User manual
- Instructions for use