



SATISFYER - 1 NEXT GENERATION

Price	57.84 Euro
Number	70137575
Producer code	FETISHID-214615
EAN	4049369015061

Product description

You'll be ready for an adventure anywhere with the Satisfyer 1 and 2. Thanks to the practical battery compartment, you can experience multiple pleasures whatever the time and place. The waterproof feature gives you a sensual experience underwater.

The peppy Satisfyer 1 is the must-have for globetrotters. The slim, round shape of the pressure wave vibrator makes it the perfect companion away from home. Battery-powered operation allows contact-free pleasure at the push of a button - whenever you want.

- Whisper mode
- Easy to clean
- 11 programs
- Waterproof for even more fun underwater
- Pressure wave and touch-free clitoral stimulation
- Body-friendly silicone
- Requires 2x AAA batteries, not included

The Satisfyer 1 enables multiple and incredibly intense orgasms within minutes. With its oval head, innovative vacuum technology and touch-free massage, the pleasure it provides will wow you. Press the toy's button for about 2 seconds to turn the Satisfyer 1 on. This will activate the toy's gentlest massage setting. Gently move your labia aside, to expose your clitoris. Place the toy's head onto your clitoris, so that your clitoris is situated comfortably inside the hollow. Once you've found the ideal position, you won't need to move the toy again. Tip: Using a water-based lubricant such as Waterglide® will make using the toy even more pleasurable. By using the Satisfyer 1 under water (e.g. under the shower or in the bathtub) you can achieve even more intense pulsations.

You can adjust the vibration intensity using the toy's button. Every time you press the button, the intensity will increase by one level. There are 11 levels of intensity you can choose from. To reduce the intensity back from level 11 again, one level at a time, continue pressing the button. To turn the toy off, press the button for about 2 seconds.

The Satisfyer 1 is waterproof and very easy to clean. Even the nozzle can be cleaned easily, using a cotton bud or Q-tip. For ideal cleaning results, we recommend using a special erotic toy cleaner, such as. Apply the cleaner, briefly allow it to take effect and then dry your erotic toy using a soft, lint-free cloth. Regular cleaning ensures the longevity of your erotic toy

The toy is powered using 2 micro AAA batteries, so it's wireless and easy to use. Before using the product for the first time, you must place two batteries inside it. Open the battery compartment by turning. When placing the batteries inside the toy, please be sure to place the poles of the batteries correctly. If batteries are placed incorrectly, this may impede the product's function. If the product is not functioning correctly or fully, please check the placement of the batteries.

In case of technical difficulties or if the product is not functioning correctly, please press the toy's button for 5 seconds. If the product continues to malfunction, please contact: service@satisfyer.com

